

Purpose

Technique PRNTFGRP sets the Forecast Groups for which carryover is to be printed.

Valid values are NO (0) and YES (1).

The Global default is NO (0).

This Technique is Universal.

This Technique has 5 Arguments which are the Forecast Group identifiers.

The Global default for all Arguments is blank.

Form of Input

PRNTFGRP identifiers

where identifiers are the Forecast Group identifiers

Example

PRNTFGRP SPRING

This causes carryover for the SPRING Forecast Group to be displayed.

PRNTFGRP SPRING NEOSHO

This causes carryover for both the SPRING and NEOSHO Forecast Groups to be displayed.